 



Disassembly & Recycling Manual

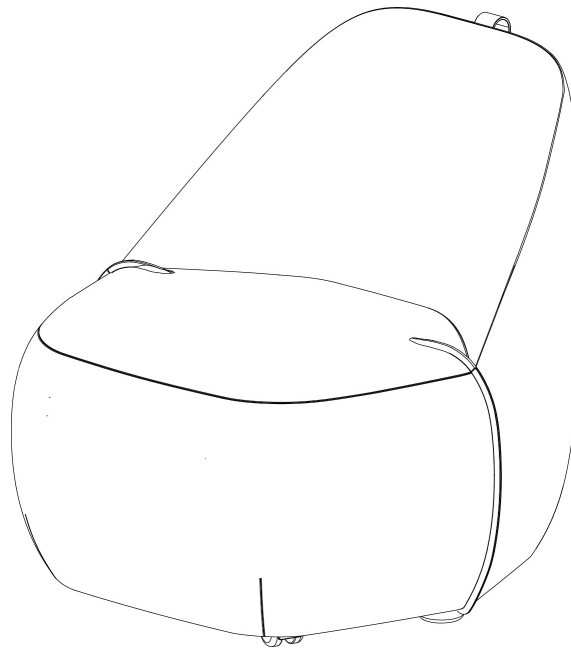

Part Key : Glides

Part	Qty	Material
A Back Foam	1	PU Foam Nylon PET Fabric
B Seat Foam	1	PU Foam Nylon PET Fabric
C Body	1	Plywood PU Foam PE Foam Fabric Steel
D Handle	1	PET Felt Leather Steel
E Glide Assembly*	6	PET Nylon Steel

 
* See pg 6

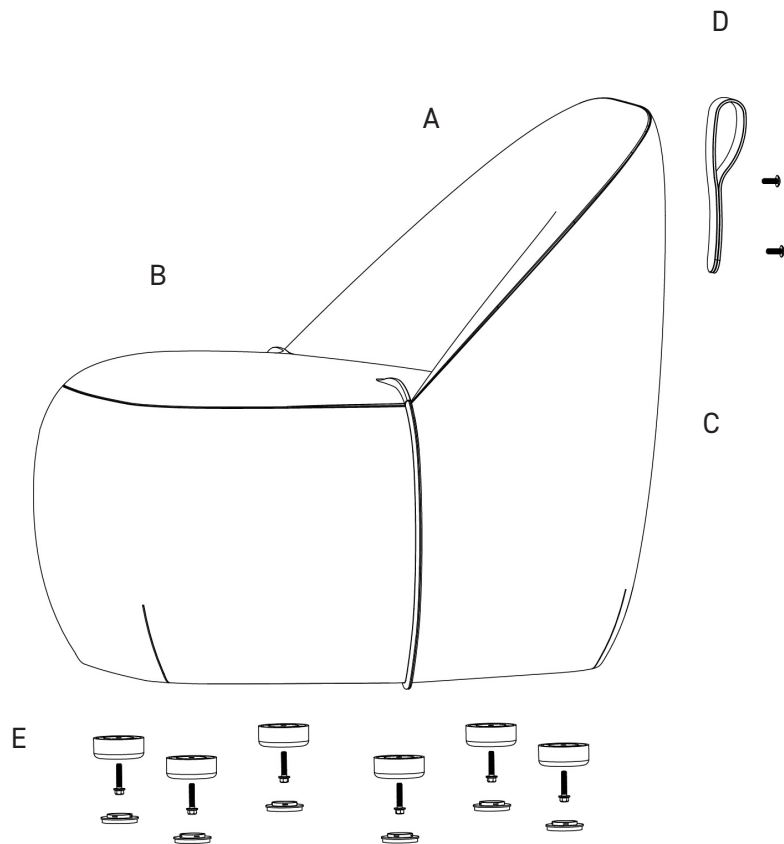

Part Key : Casters


Part	Qty	Material
A Back Foam	1	PU Foam Nylon PET Fabric
B Seat Foam	1	PU Foam Nylon PET Fabric
C Body	1	Plywood PU Foam PE Foam Fabric Steel
D Handle	1	PET Felt Leather Steel
E Caster Assembly*	4	PET Nylon Steel

* See pg 6

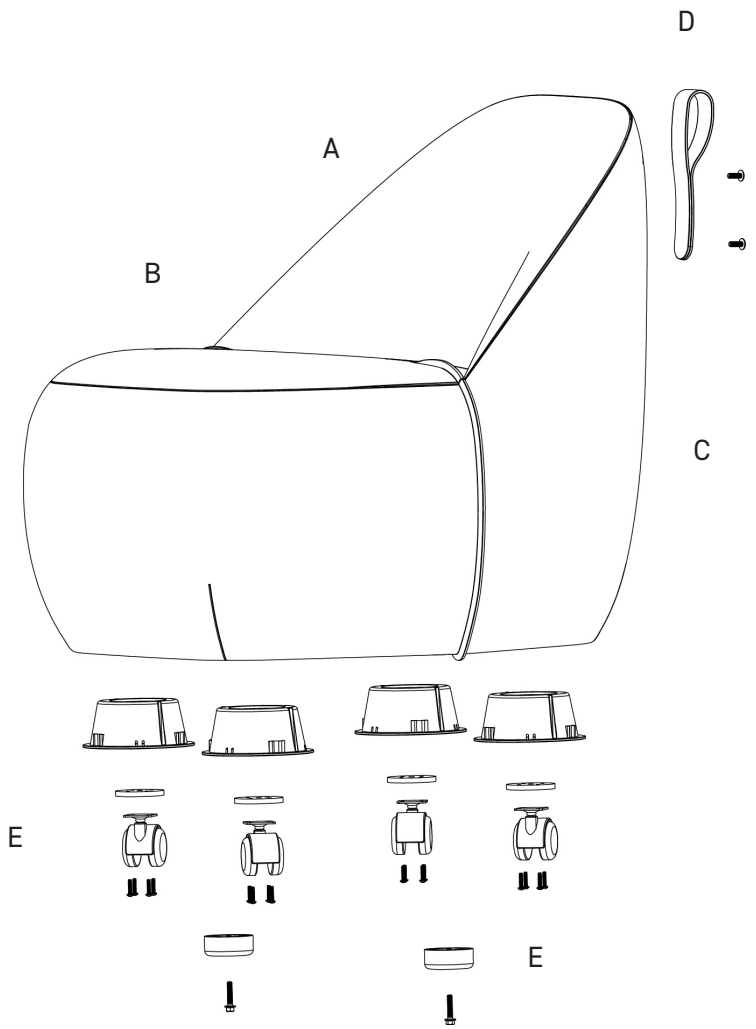

Hardware Key

Part	Qty	Material
H1 Hex head screw*	6 / 2	Steel
H2 Tamper Proof Truss Head	2	Steel
H3 Pan head screw^	16	Steel

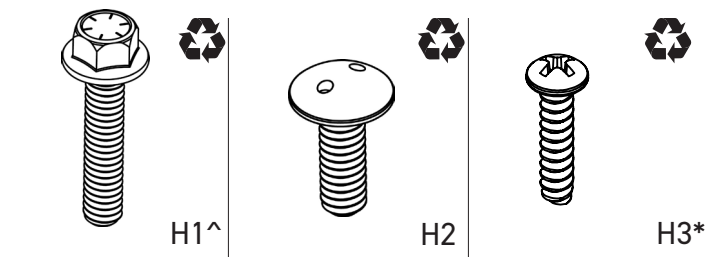


* Dependent on Glide/Casters

^ Caster models only

I | Handle

A. Position your Dau so the (H2) screws of the handle are easily accessible. Using a #14 spanner bit, unscrew the tamper proof screws to remove the handle from the unit.

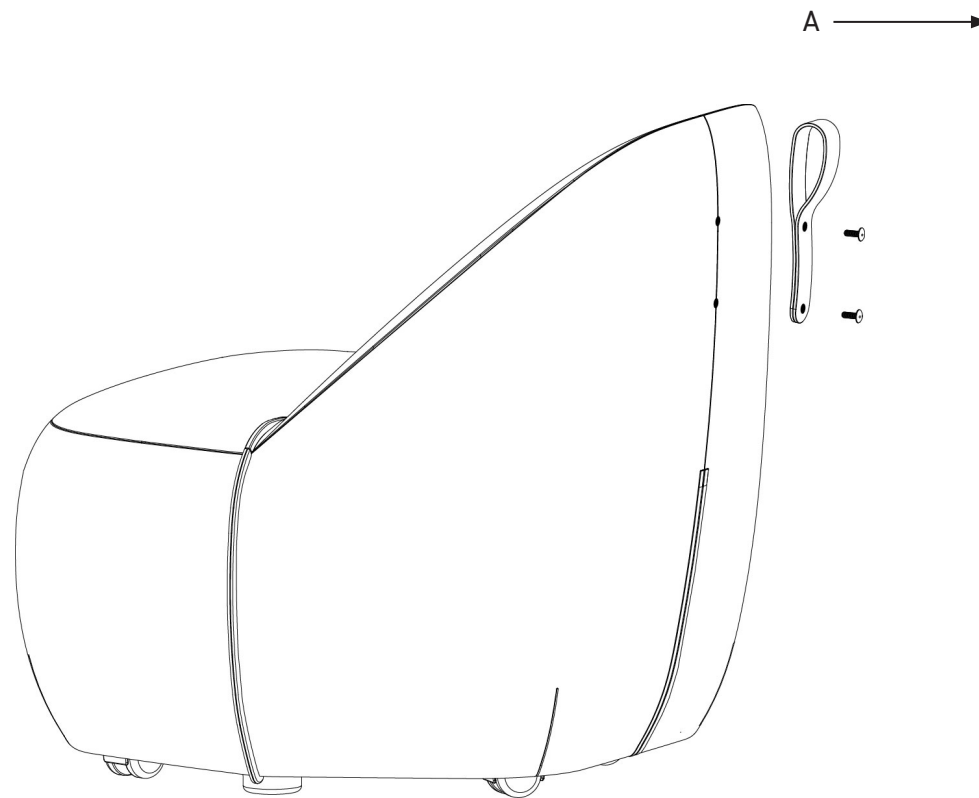

II | Glides + Casters

A. If your Dau is equipped with glides, remove the H1 screw located inside each glide (x6); for glides with felt or rubber inserts, pry off insert first.

B. If your Dau is equipped with casters, remove the H3 screws (x4) located inside each caster housing (x4). Once the casters and spacers are removed, release the caster housing (x4) by prying out of the chair body. To remove the accompanying glides follow instructions in A.

