Disassembly and Recycling Document

Disassembly Time: 10min / No Special Training Required

Model: Share with Privacy Panel

*Refer to P.2 for model variations

Tools Required

safety glasses phillips screwdriver vice grips







Breakdown Steps


- Turn the chair on its side to reveal the steel brackets holding the privacy panel in place. Start by using a phillips head screwdriver to remove the brackets (figure A1). Use a screw driver to remove all of the brackets attached to the panel.
- After the bottom brackets are removed, slide the back board upward to unhook it from the brackets hidden between the backboard and the back of the chair.
- 3. Use a socket wrench to unscrew the nuts holding the back rest to the seat from underneath the chair. Use a screw driver to remove the legs from the chair. The leg glides can be unscrewed from the bottom of the leg. This can be done by hand or with the assistance of vice grips (figure C2).
- After removing the nuts, the seat back can be lifted from the chair. This also releases the long (previousely hidden) brackets.









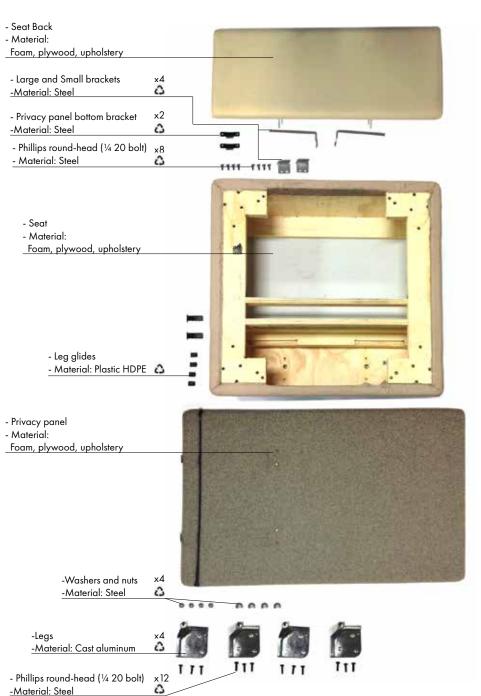



Disassembly and Recycling DocumentDisassembly Time: 10min / No Special Training Required

Chair Variations

Share

Available in both task and lounge height seating surfaces as well as 2 different degreed corner pieces and a plethora of attachments, the Share chair is designed to be customized.

- Orientation using 90 degree corner pieces and a high kneewall (figure A1).
- Orientation using 120 degree corner pieces and a low kneewall (figure A2).
- Orientation using privacy screen (figure A3).
- Orientation using endcaps (figure A4)
- Orientation using benches (figure A5)
- Cube (figure A6)

Full list of parts include Chairs Benches (chairs with no kneewall) Corner units End Caps Cubes Knee Walls – High and Low **Privacy Screens**

Disassembly for all of these versions is fairly similar to the original. Please use P1 as a disassembly reference for all of these variations.



