

**stylex**

# **Anla**

 
**DISASSEMBLY & RECYCLING MANUAL**

[www.stylexdesign.com](http://www.stylexdesign.com)

# Anla

## DISASSEMBLY & RECYCLING MANUAL

### PART KEY: ARM SEAT

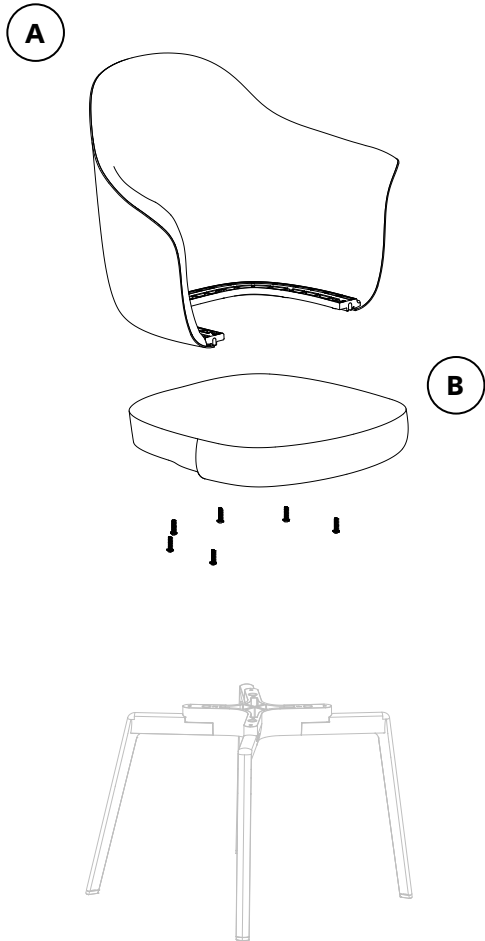


PART	QTY	MATERIAL
<b>A. Arm Back</b>	1	GF PP, PU Foam, Dacron, Uph
<b>B. Seat</b>	1	GF PP, PU Foam, Steel

See Pg. 9 for Disassembly: Seat.

# Anla
 
## DISASSEMBLY & RECYCLING MANUAL

### PART KEY: ARMLESS SEAT

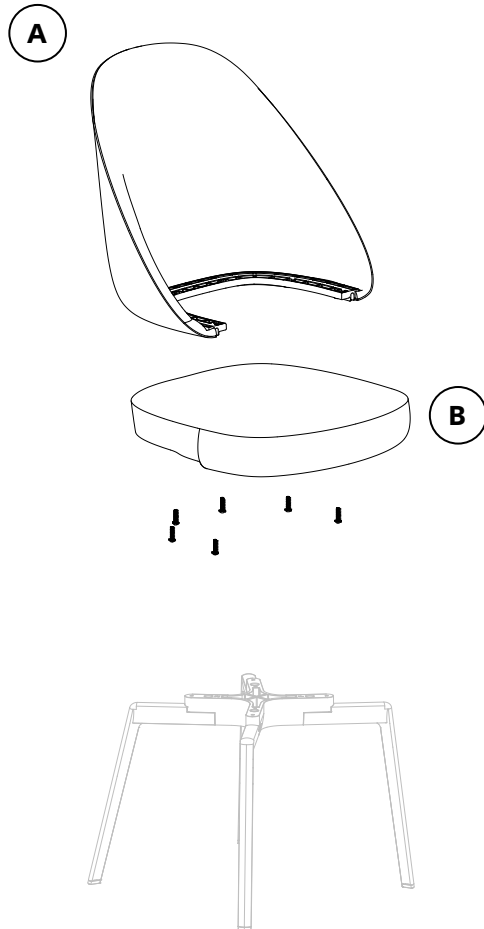

PART	QTY	MATERIAL
<b>A. Armless Back</b>	1	GF PP, PU Foam, Dacron, Uph
<b>B. Seat</b>	1	GF PP, PU Foam, Steel

See Pg. 9 for Disassembly: Seat.


# Anla
 
## DISASSEMBLY & RECYCLING MANUAL

---

### PART KEY: 4 LEG ALUMINUM BASE

---

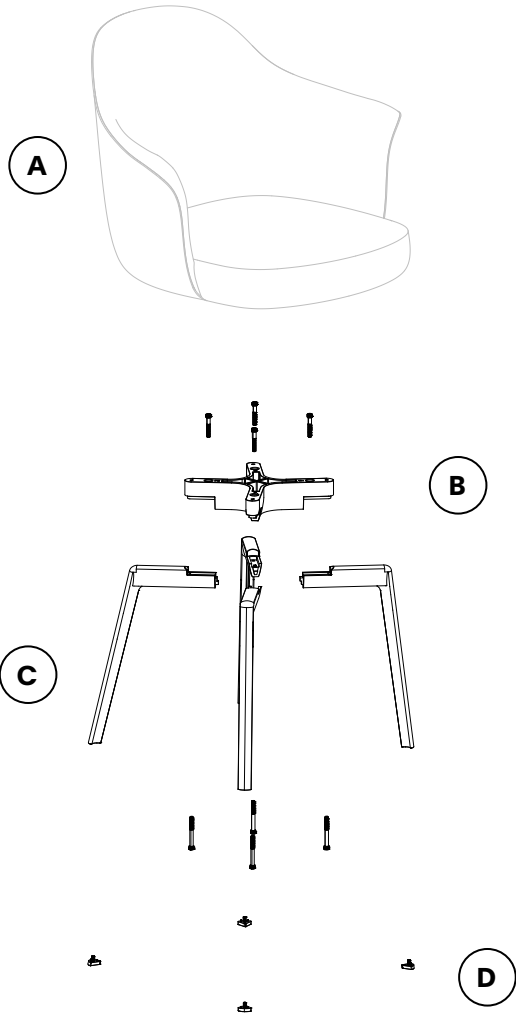

PART	QTY	MATERIAL
<b>A. Arm Seat</b>	1	GF PP, PU Foam, Dacron, Uph, Steel
<b>B. Aluminum Hub</b>	1	Aluminum
<b>C. Aluminum Leg</b>	4	Aluminum
<b>D. Aluminum Base Glide</b>	4	Nylon

See Pg. 10 for Disassembly: 4 Leg Aluminum Base.

# Anla

## DISASSEMBLY & RECYCLING MANUAL

---

### PART KEY: 4 LEG STEEL BASE

---



PART	QTY	MATERIAL
<b>A. Arm Seat</b>	1	GF PP, PU Foam, Dacron, Uph, Steel
<b>B. 4 Leg Steel Base</b>	1	Steel
<b>C. Steel Base Glide</b>	4	Nylon

See Pg. 11 for Disassembly: 4 Leg Steel Base. Same instructions apply to Lounge Chair.

 
# Anla

## DISASSEMBLY & RECYCLING MANUAL

---

### PART KEY: SLED BASE

---

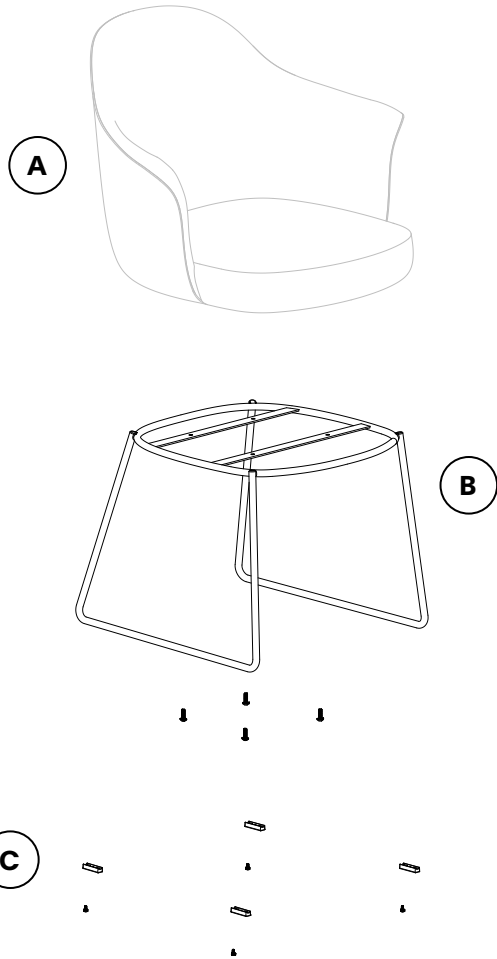


PART	QTY	MATERIAL
<b>A. Arm Seat</b>	1	GF PP, PU Foam, Dacron, Uph, Steel
<b>B. Sled Base</b>	1	Steel
<b>C. Sled Base Glide</b>	4	Nylon

See Pg. 12 for Disassembly: Sled Base. Same instructions apply to Counter Stool and Bar Stool.

# Anla
 
## DISASSEMBLY & RECYCLING MANUAL

### PART KEY: 5 BLADE SWIVEL BASE

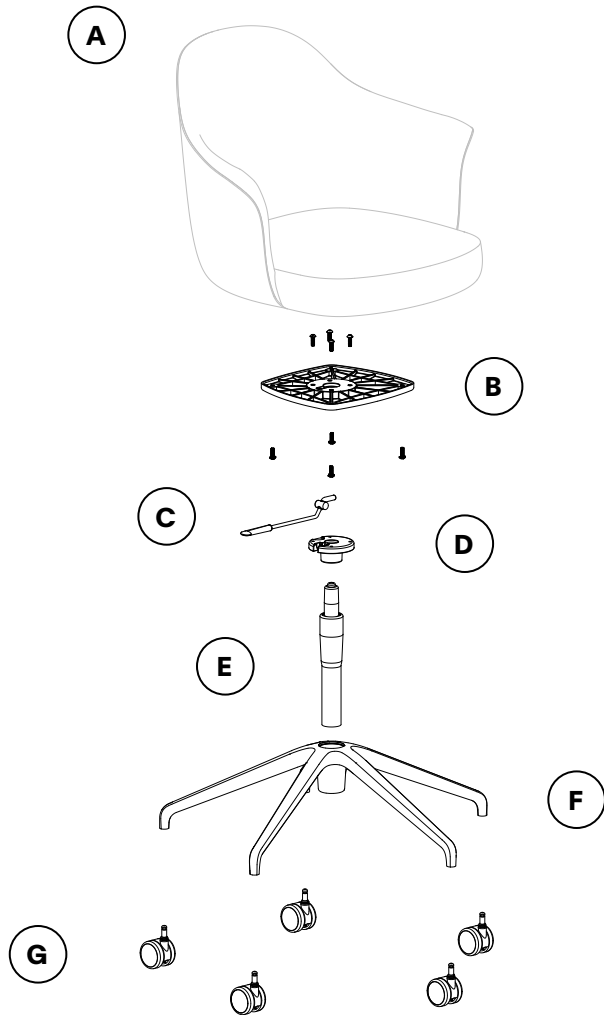


PART	QTY	MATERIAL
<b>A. Arm Seat</b>	1	GF PP, PU Foam, Dacron, Uph, Steel
<b>B. Support Plate</b>	1	Aluminum
<b>C. Lever</b>	1	Aluminum
<b>D. Cylinder Receiver</b>	1	Aluminum
<b>E. Cylinder</b>	1	Steel
<b>F. 5 Blade Base</b>	1	Aluminum
<b>G. Caster</b>	6	Nylon, Steel

See Pgs. 13-14 for Disassembly: 5 Blad Swivel Base.

# Anla
 
## DISASSEMBLY & RECYCLING MANUAL

### HARDWARE KEY

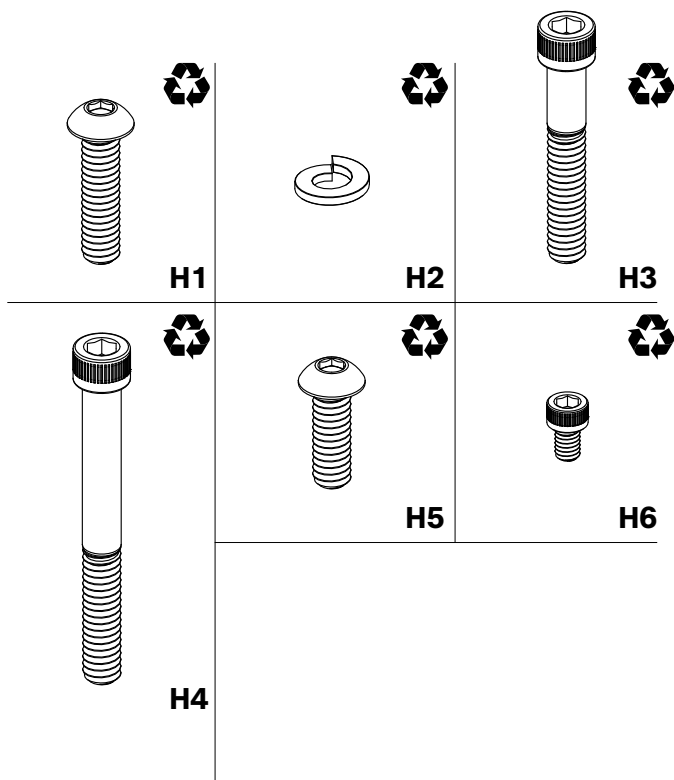

PART	QTY	MATERIAL
<b>H1. Button Head Screw</b>	6	Steel
<b>H2. Locker Washer*</b>	10 or 14	Steel
<b>H3. Socket Head Cap Screw</b>	4	Steel
<b>H4. Socket Heas Cap Screw</b>	4	Steel
<b>H5. Button Head Screw*</b>	4 or 8	Steel
<b>H6. Socket Head Cap Screw</b>	6	Steel

\*Depends on Unit Type



#### Recommended Tools:

  Safety Glasses  
 #2 and #3 Phillips Screwdriver or Driver Bits  
 5/32" Allen Wrench  
 7/16" Wrench or Socket Wrench  
 Mallet



### DISASSEMBLY: SEAT

- A.** Using a Phillips screwdriver or driver, remove the screws (6 total) attaching the back to the seat. Arm seat (Left) and Armless seat (Right).

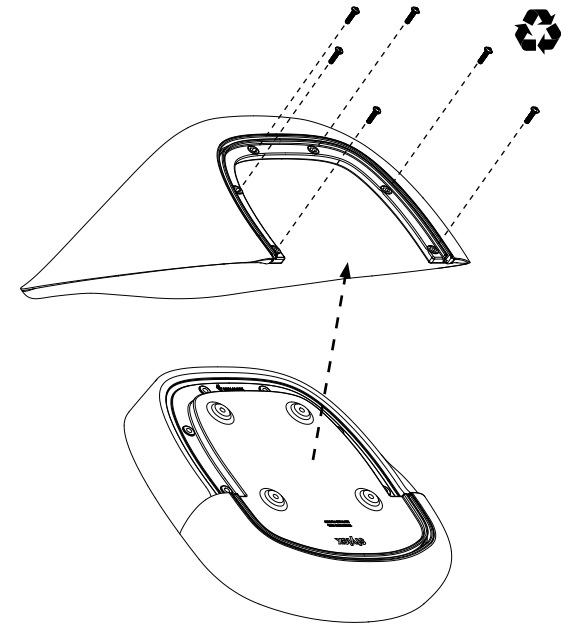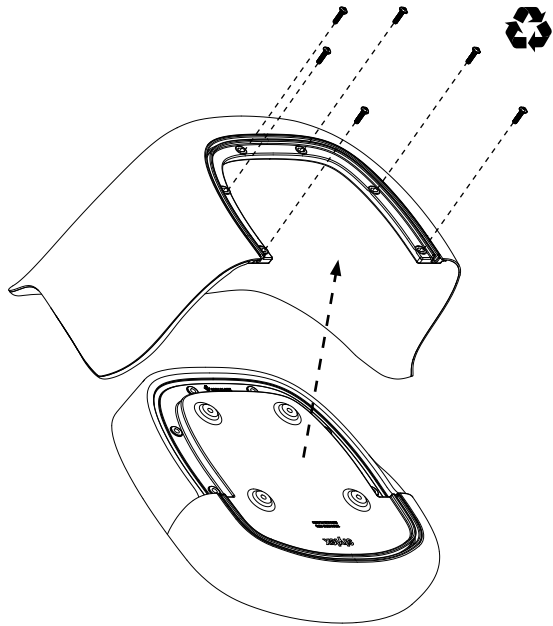


# Anla

## DISASSEMBLY & RECYCLING MANUAL


### DISASSEMBLY: 4 LEG ALUMINUM BASE

 - A.** Flip the chair over to locate the base. Using a Phillips screwdriver or driver, remove the screws (4 total) attaching the base to the bottom of the seat.

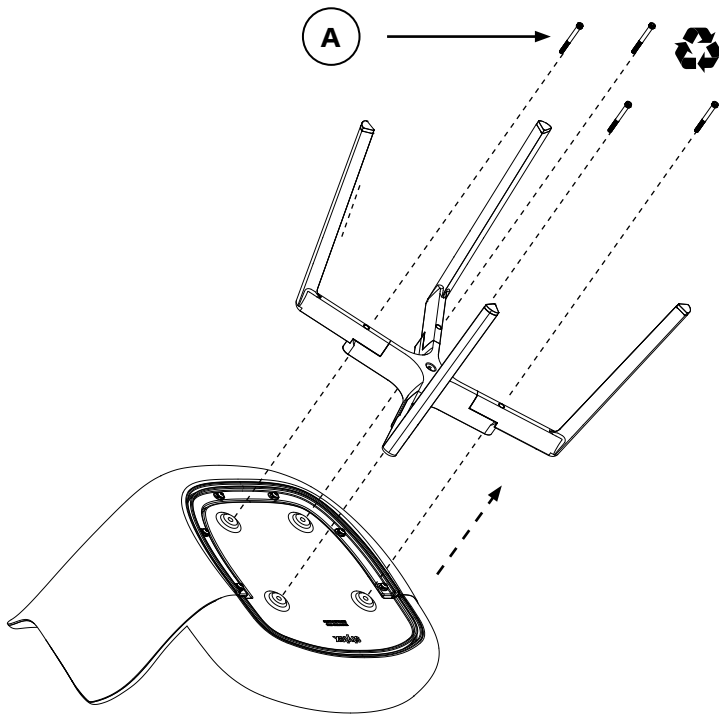

- B.** Set the seat aside. Using a Phillips screwdriver or driver, remove the screws (6 total) attaching the back to the seat. Please refer to Pg. 9 for Disassembly: Seat.

 - C.** Set the base aside. Using a Phillips screwdriver or driver, remove the screws (4 total) attaching the legs to the cross-shaped hub. Then remove the glides located at the bottom of each leg.

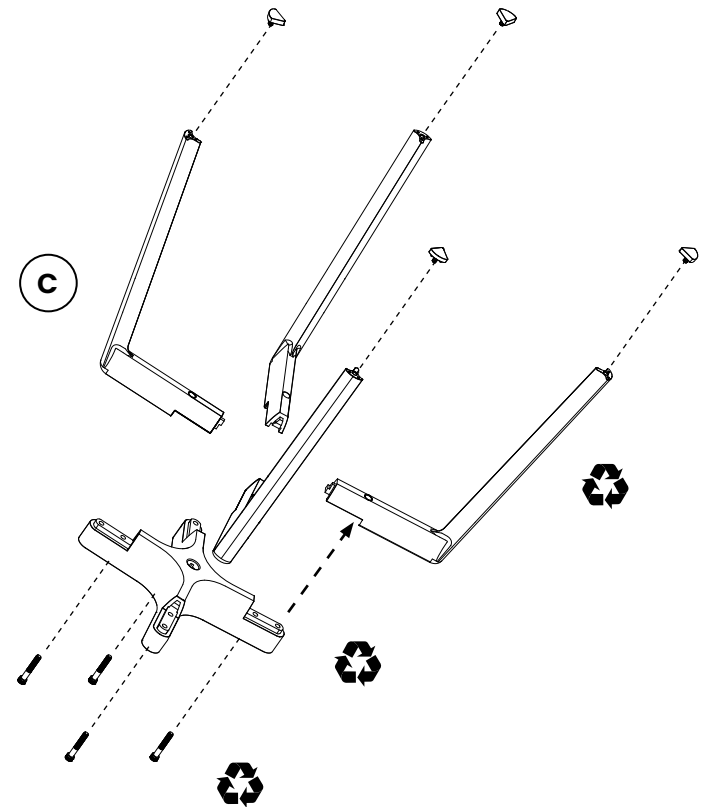


# Anla

## DISASSEMBLY & RECYCLING MANUAL


### DISASSEMBLY: 4 LEG STEEL BASE

 **A.** Flip the chair over to locate the base.

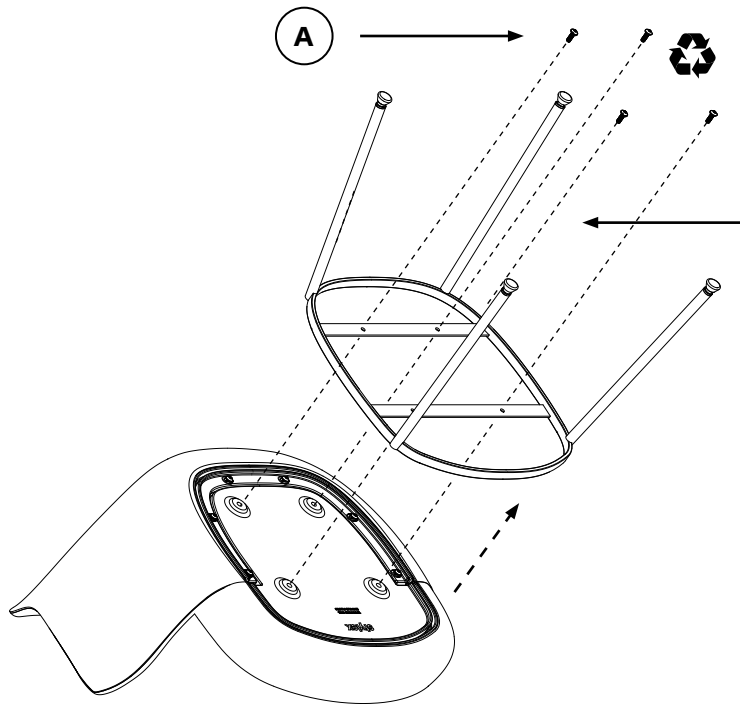

**B.** Set the seat aside. Using a Phillips screwdriver or driver, remove the screws (6 total) attaching the back to the seat. Please refer to Pg. 9 for Disassembly: Seat.

 **C.** Remove the glides (4 total) located at the bottom of each leg.

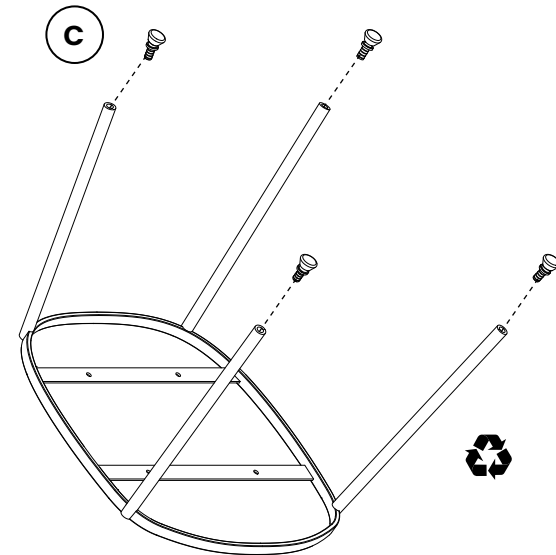


# Anla

## DISASSEMBLY & RECYCLING MANUAL


### DISASSEMBLY: SLED BASE

 - A.** Using a Phillips screwdriver or driver, remove the screws (4 total) attaching the base to the bottom of the seat.

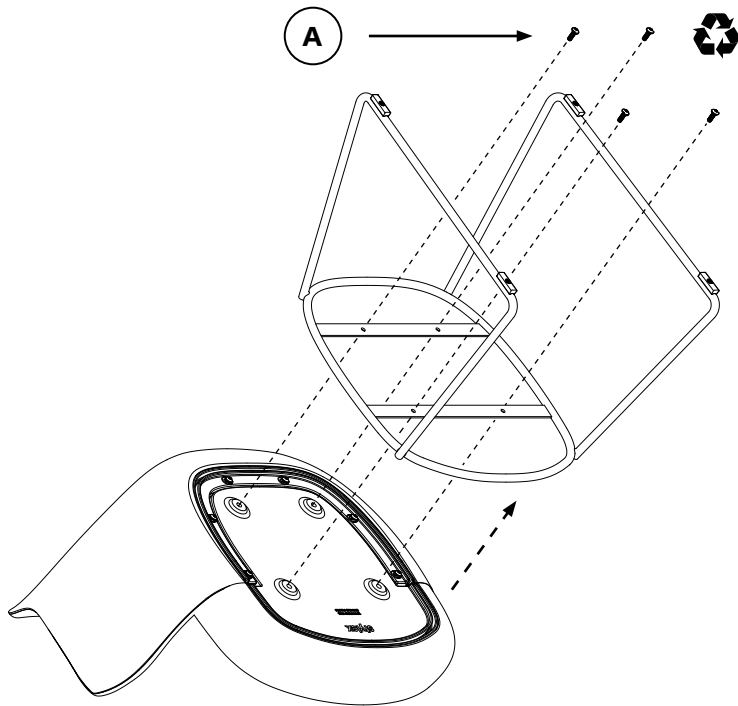


- B.** Set the seat aside. Using a Phillips screwdriver or driver, remove the screws (6 total) attaching the back to the seat. Please refer to Pg. 9 for Disassembly: Seat.

 - C.** Remove the glides (4 total) located at the bottom the sled.

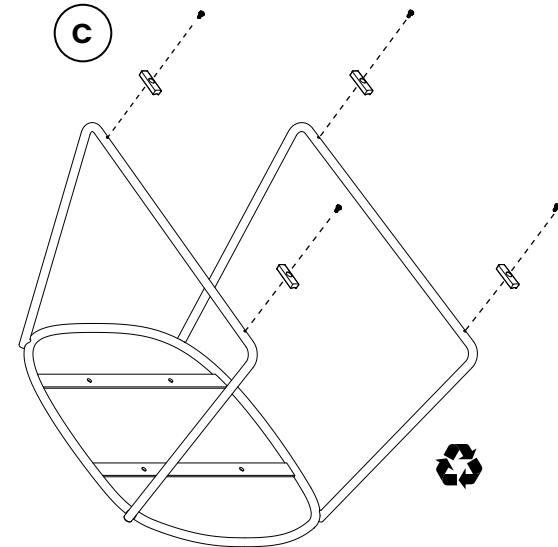


### DISASSEMBLY: 5 BLADE SWIVEL BASE

 - A.** Flip the chair over to locate the base. Using a Phillips screwdriver or driver, remove the screws (4 total) attaching the base to the bottom of the seat.

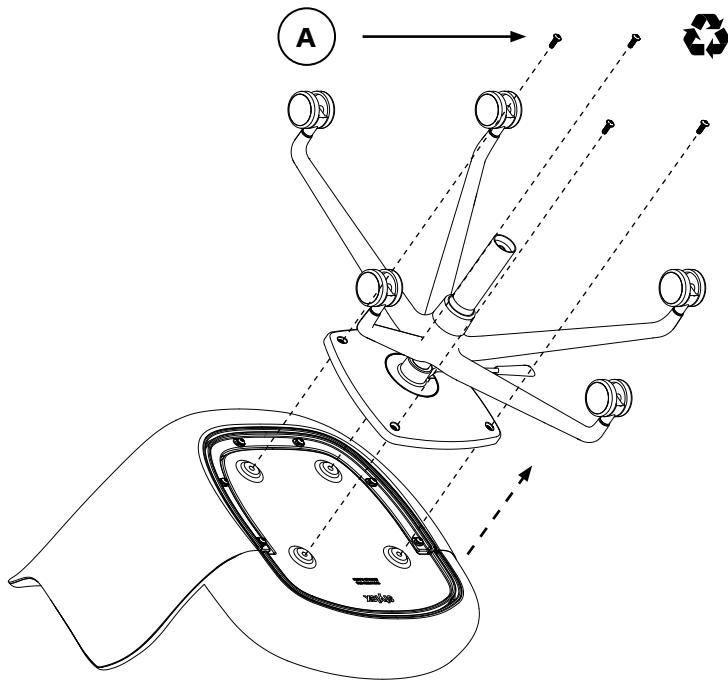

- B.** Set the seat aside. Using a Phillips screwdriver or driver, remove the screws (6 total) attaching the back to the seat. Please refer to Pg. 9 for Disassembly: Seat.

 - C.** Using a mallet, firmly hit the support plate until the cylinder separates from the the support plate.

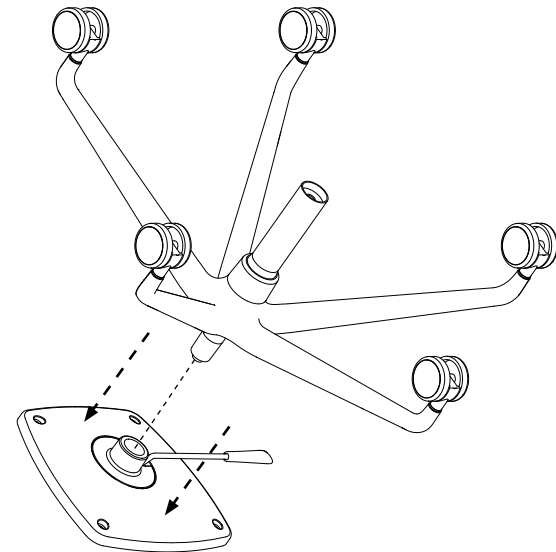


# Anla


## DISASSEMBLY & RECYCLING MANUAL

### DISASSEMBLY: 5 BLADE SWIVEL BASE

 - D.** Using a Phillips screwdriver or driver, remove the screws (4 total) from the support plate until the level and cylinder receiver fall off.

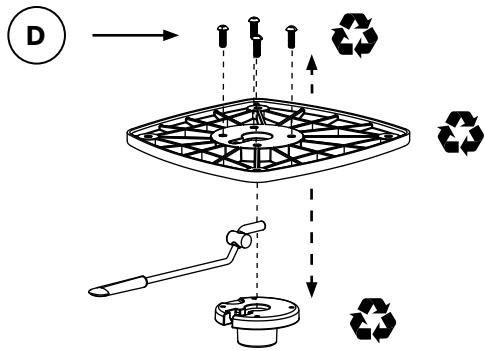

 - E.** Using a mallet, firmly hit the cylinder from beneath until the cylinder separates from the 5 blade base.

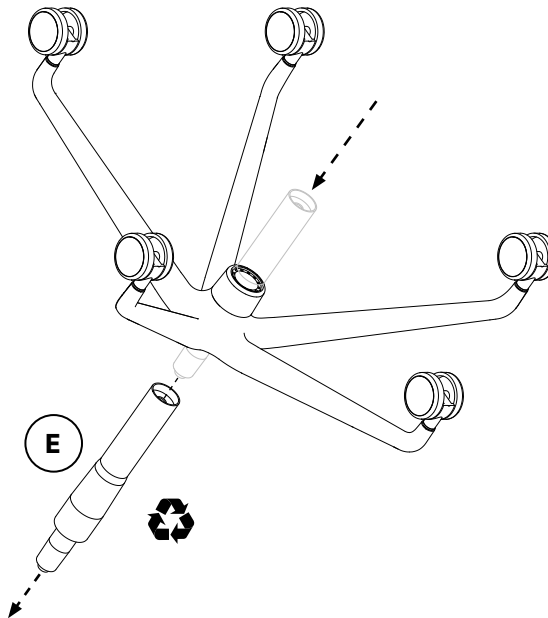

- F.** Remove casters (5 total) from the bottom of each blade of the base.

