Model: Mark 2

*Refer to P.2 for model variations

Tools Required


safety glasses phillips screwdriver 3/16 hex key 1/8 hex key vice grips hammer



Breakdown Steps

- Turn the chair upside down to reveal the leg glides protruding from the bottom of the leg. Use vice grips to clamp down on the glide and then tear it out. The use of a hammer to tap on the vice grips may help the glides to be pulled out.
- 2. While the chair is upside down, use a Phillips head to unscrew the seat pan (figure B1). Once you unscrew and remove the plywood seat pan you will see that underneath are another 4 screws holding the seat to the frame. Unscrew them to drop the seat from the metal frame (figure B2).
- 3. Use an 1/8 inch hex key to unscrew the set screw located underneath the arm. This will release the seat back from the arm.
- 4. Use a 3/16 hex key to unscrew the bolts holding the seat to the frame. Once all of the hex bolts are unscrewed, you will have to pull the back of the chair away from the metal frame. Note you will have to pull the arms off of the set screws in the back of the seat before the seat can be lifted of the steel frame




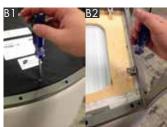





- Back - Material: <u>Foam, plywood, upholstery</u>

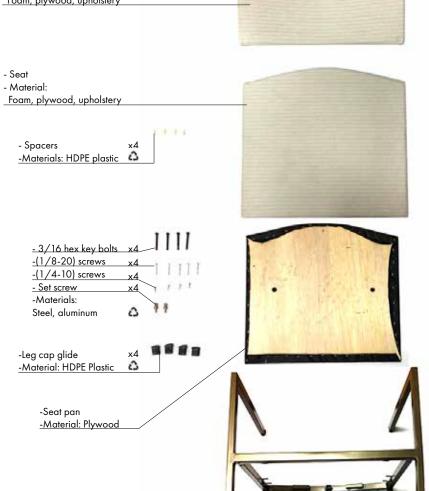

-Frame structure

-Material: Steel 🚨



Disassembly and Recycling DocumentDisassembly Time: 10min / No Special Training Required

Chair Variations

Mark 2

The Mark 2 comes in three different variations available with and without arms.

- Molded plywood back with upholstered seat (figure A1).
- Fully upholstered with arms (figure A2).
- Stool frame (figure A3)

Disassembly for all of these versions is fairly similar to the original. Please use P1 as a disassembly reference for all of these variations.





