



# STYLEX

Model: Insight

\*Refer to P.2, P.3 and P.4 for model variations

## Tools Required

safety glasses  
mallet  
phillips screwdriver  
flathead screwdriver  
9/16ths socket wrench

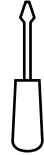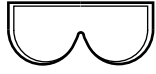

## Disassembly and Recycling Document

Disassembly Time: 10min / No Special Training Required

## Breakdown Steps

1. Turn the chair upside down and with a 9/16 diameter socket wrench, unscrew the bracket connecting the back of the chair to the tilt mechanism.



2. Once the back of the chair is removed from the tilt mechanism, use a screw driver to unscrew the tilt mechanism (figure B1) and arm rests (figure B2).



3. Now you will need to separate the mechanism from the hydraulic cylinder. Do this by striking the mechanism with a mallet until it drops from the cylinder.



4. To remove the cylinder from the five star base, strike the cylinder with a mallet from the underneath side of the base until the cylinder pops all the way through to the other side.



- Back  
- Material:  
Plastic, foam, upholstery

- Carriage bolt and nut x3  
- Material: Steel

- Arms and casting  
- Materials: Nylon plastic  
\*P.U. overmolded aluminum  
and polished aluminum  
variations see P2.

- Phillips round-head (1/4"20 bolt) x6  
- Material: Steel

- Upholstered seat  
- Material:  
Foam, plastic, upholstery

- Tilt mechanism  
- Material: Plastic & steel

-Hydraulic cylinder  
-Material: Plastic & steel

- 5 star base  
- Material:  
Nylon plastic  
\*Aluminum variation see P2.

- Wheels  
- Materials: Plastic, steel pin x5



### Chair Variations

#### Insight

The insight chair is one of many options:

- Cast aluminum fixed loop conference arms w/ P.U. overmold and aluminum base (figure A1).
- Nylon adjustable height task arms w/ Aluminum base (figure A2).
- Glass-filled nylon base stool base (figure A3).
- Steel sled frame (figure A4).

♻️ Aluminum base and steel sled base are recyclable.

Disassembly for all of these versions is fairly similar to the original with the exception of the sled base (Figure A4). Review Disassembly document for the Insight Wraparound for instructions.

A1



A2



A3



A4



### Chair Variations

#### Insight Decora

A more decorative version of the original insight, the Decora has three base options.

- Cast aluminum fixed loop conference arms w/ P.U. overmold and aluminum base (figure A1).
- Glass filled nylon stool base (figure A2).
- Steel sled base (figure A3).

♻️ Aluminum base and steel sled base are recyclable.

Disassembly for all of these versions is fairly similar to the original with the exception of the sled base (Figure A4). Review Disassembly document for the Insight Wraparound for instructions.

A1



A2



A3



#### Insight Executive

A more luxurious version of the original insight

- Cast aluminum fixed loop conference arms w/ P.U. overmold and aluminum base
- Seat back in Mid (figure B1) to Tall (figure B2) range.

♻️ Aluminum bases are recyclable.

Disassembly for the Executive is similar to the original.

B1



B2



**Chair Variations**

**Insight Mesh**

The Insight Mesh chair is one of many options:

- Cast aluminum fixed loop conference arms w/ P.U. overmold and aluminum base (figure A1).
- Nylon fixed loop conference arms w/ P.U. overmold and nylon base (figure A2).
- Glass filled nylon base (figure A3).
- Steel sled frame (figure A4).

♻️ Aluminum base and steel sled base are recyclable.

Disassembly for all of these versions is fairly similar to the original with the exception of the sled base (Figure A4). Review Disassembly document for the Insight Wraparound for instructions.

A1



A2



A3



A4

